



# MEGA BOUNCER™

The product should be periodically examined for conditions that may result in the risk of fire, electric shock, or injury to persons and that, in an event such conditions, the product should not be used until properly repaired.

## IMPORTANT SAFETY INSTRUCTIONS. PLEASE READ AND SAVE THESE INSTRUCTIONS CAREFULLY BEFORE USING THIS PRODUCT.

**WARNING!** To Reduce The Risk Of Fire Or Electric Shock. Do Not Use This Blower With Any Solid-State Speed Control Device. Warn the user to unplug or disconnect the appliance from the power supply before servicing.

**DANGER** To prevent electric shock, do not immerse the blower in water, wipe clean with damp cloth. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.

Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.

## CAUTION - ELECTRICALLY OPERATED PRODUCT

Operation of Blower Fan Unit not recommended for children under 14 years of age. As with all electric products, precautions should be observed during handling and use to prevent electric shock.

**AGES 3+**



## Safety Precautions

**WARNING!** Failure to follow these instructions could result IN SERIOUS INJURY OR DEATH.

**CHILDREN MUST HAVE ADULT SUPERVISION WHEN PLAYING WITH THIS PRODUCT.**

**NEVER LEAVE CHILDREN UNATTENDED.**

- Children must be at least 3 years old to use this product.
- Individual user maximum weight limit: 120lbs (54kg).
- Combined user maximum weight limit: 200lbs (91kg).
- The maximum fall height is 16in (41cm).
- For outdoor use.
- Keep away from fire.
- To prevent electrical shock or damage to blower, do not pour water on it and never leave outside overnight. Keep the blower away from water.
- Keep children away from blower.
- Remove shoes, eyeglasses, and sharp objects before playing with product.
- No flipping, piling, pushing or wrestling when playing with the product.
- Only one child should enter or exit the doorway at a time.

**SET UP:**

- Adult assembly required.
- NOT FOR COMMERCIAL USE. This product is intended for family domestic use only.
- Place and use on level ground.
- Do not set up or use in windy, snowy or rainy weather.
- Do not set up or use on concrete, asphalt or any other hard surfaces.
- Use on flat lawn only, not pavement or other hard surfaces. Lawn should be free of rocks, bumps, depressions, sticks, etc.
- Set up a safe distance from fences, garages, houses, walls, water, overhanging branches, laundry lines, overhanging electrical wires and other obstructions.
- To prevent product becoming unstable and the possibility of serious injury or death, do not play on the product until it is completely filled with air and anchored properly.
- The design of the constant air slide requires a fair amount of air to emit from its porous fabric material. This ensures that the slide remain inflated while allowing it to resist small tears and punctures.
- To anchor the product properly, ALWAYS anchor the product and blower with corresponding ground stakes before use.
- Keep the blower away from water.
- To extend the life of the product, do not leave the product in the sun when not in use.

**BOUNCING INSTRUCTIONS:**

- Enter the bouncer by using the specified entrance only.
- To avoid the risk of serious injury or death, make sure there are no other users near the entrance before entering the bouncer. Open the mesh door and always enter the bouncer with your feet first (by crawling in on your knees). Never enter head first. Use caution when entering.
- Bounce away from walls and other occupants, especially avoid bouncing near the openings.
- Do not enter or exit the product by jumping in or out of it.
- To avoid the risk of injury, never stand on, bounce into or jump from walls inside or outside of product.
- Never dive head first in the bouncer.
- Keep hands off the mesh walls.

## Repair Patch Instructions

For your convenience, a repair patch has been included to repair holes in the inflatable section. In the event of an accidental puncture, cut out a suitably sized patch. Make sure you round the corners of your repair patch to avoid peeling. Make sure area to be patched is clean. Press patch firmly over the puncture. Do not inflate for 30 minutes.

## Warning

While every attempt is made to embody the highest degree of protection in all equipment, we cannot guarantee freedom from injury. The user assumes all risk of injury due to use. All merchandise is sold on this condition, which no representative of the company can waive or change.


## Introduction

Bounce and climb this giant 7 ft (213cm) square jumper that gives plenty of room for bouncing fun! The blower motor provides constant air support for endless bouncing action and makes the jumper resistant to small tears and punctures. Quick set-up and puncture-resistant Dura-Tech™ construction makes this an ideal portable jumper. The Velcro closures keep the bouncing fun contained, while the see-through mesh allows children to stay in constant view.

## Setup Instructions




### Placement:

Use on flat lawn only, not pavement or other hard surfaces. Lawn should be free of rocks, bumps, depressions, sticks, etc. Mega Bouncer™ should be set up in a location that has a minimum distance of 10 ft (305cm) from any free standing structures or obstructions, including: houses, garages, fences, trees, playground equipment and large rocks.



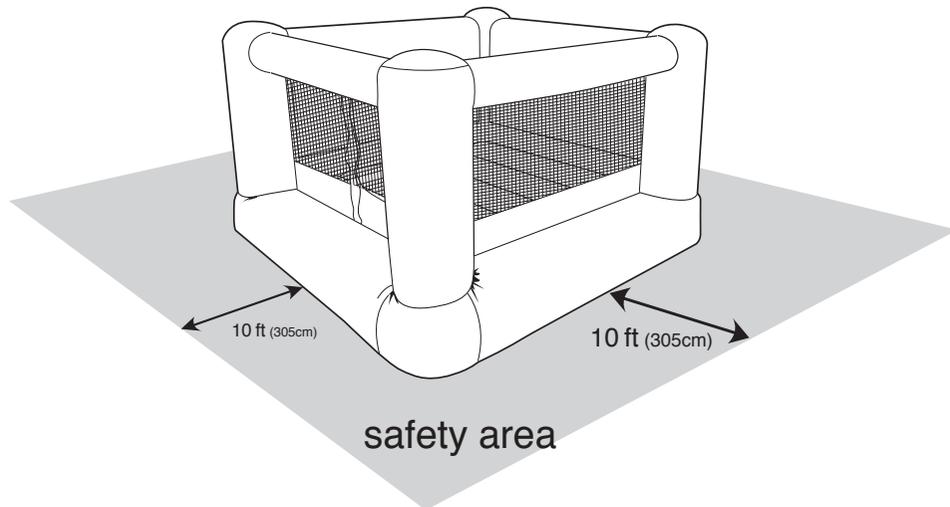


## Set up

1. Unfold the inflatable bouncer in a desired position on a smooth and level surface.
2. Attach the long intake tube at the back of the bouncer to the mouth of the blower motor using the attached Velcro Strap. To ensure a secure fit, wrap the strap around the mouth of the blower and attach the Velcro tightly. (Fig A1-A3)

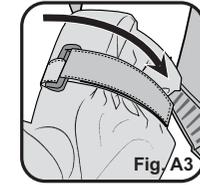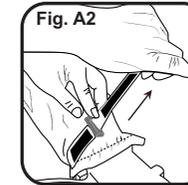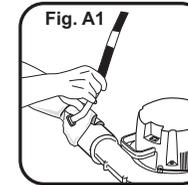

3. Tie the short air release tube closed with the drawstring provided. (Fig A4)
4. Position the blower in a straight line perpendicular and level to the back of the bouncer. The blower should be placed on a stable surface and remain upright after the bouncer is inflated. The blower is a high volume fan capable of moving a lot of air very quickly. Place the blower in an area where it will not suck in dirt or leaves. Keep blower away from children, water and moving vehicles. Set up bouncer far away from any structures or obstructions. Once positioned, secure the blower with the orange ground stakes provided. (Fig A5)
5. Do not set up over concrete, asphalt, packed earth, or any other hard surfaces. A fall onto a hard surface can result in serious injury.
6. Locate the loops around the bottom of the bouncer and anchor them to the ground with the large yellow ground stakes provided. (Fig A6)
7. Ground stakes must be completely inserted into the ground so that no part of the stake is protruding above the ground surface. This will help prevent tripping or injuries resulting from a fall.
8. Plug the blower into a properly grounded outlet and turn it on. The bouncer should inflate in less than 1 minute. Do not allow children to use the bouncer until it is fully inflated.
9. After inflation, the blower should run continuously while children are playing.

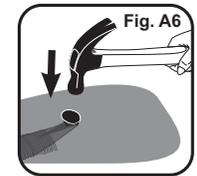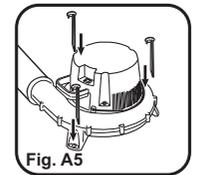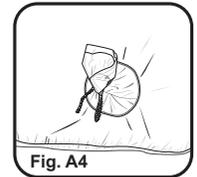

# Mega Bouncer™ Setup Diagram




Blower Motor



Bouncer Ground Stakes



Blower Ground Stakes

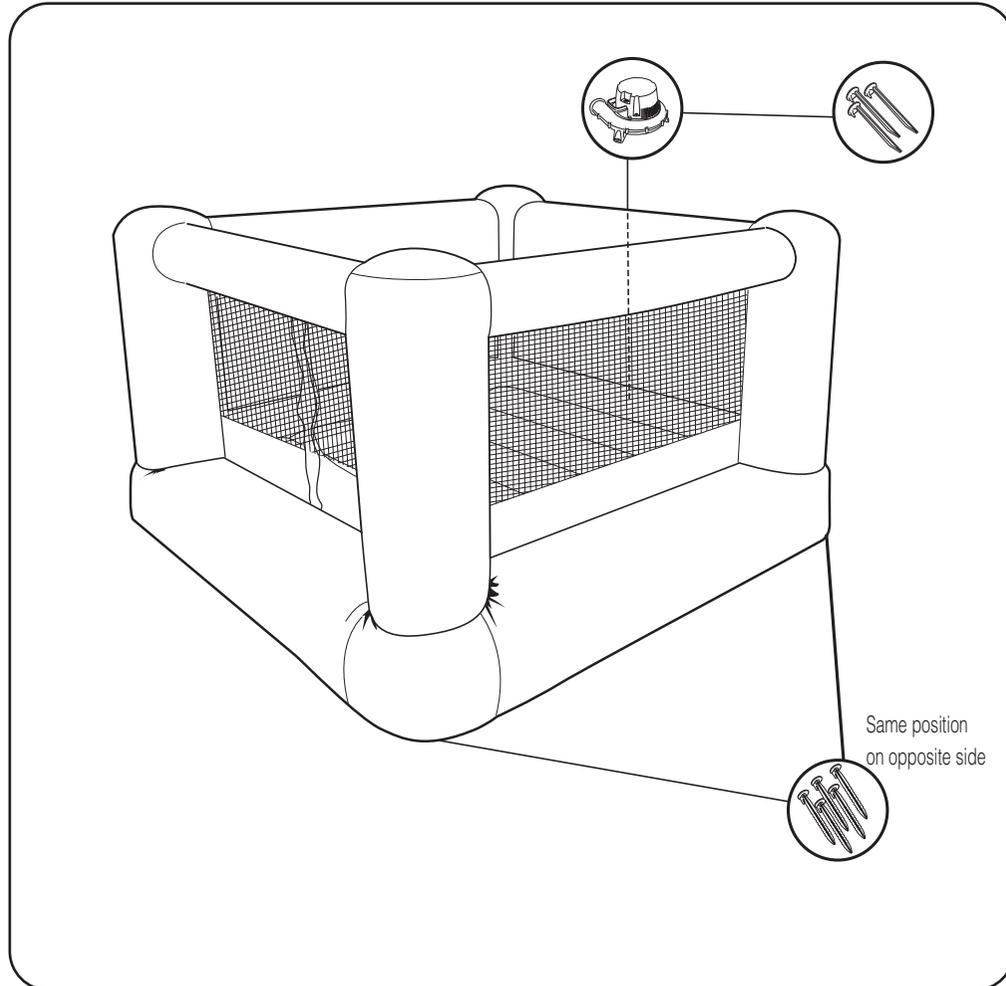

# How To Use

1. Follow all setup instructions to ensure the product has been set up properly.
2. Remove shoes, eyeglasses, and sharp objects before playing with product.
3. No flipping, piling, pushing or wrestling when playing with the product.
4. Only one child should enter or exit the doorway at a time.
5. Enter the bouncer by using the specified entrance only.
6. To avoid the risk of serious injury or death, make sure there are no other users near the entrance before entering the bouncer. Open the mesh door and always enter the bouncer with your feet first. Never enter head first. Use caution when entering.
7. Bounce away from walls and other occupants; especially avoid bouncing near the opening.
8. Do not enter or exit the product by jumping in or out of it.
9. To avoid the risk of injury, never stand on, bounce into or jump from walls inside or outside of product.
10. Never dive head first in the bouncer.
11. Keep hands off the mesh walls.


# After Bouncing

After you have finished bouncing, scoot off the bouncer and stand up on the grass.

To avoid danger of tripping over the air intake tube and causing potential injury, do not walk on the side of the inflatable that has the blower motor attached. Always walk around the inflatable as shown with the dotted line in the diagram below.


Never stand, walk, or run on the bouncer as you may slip and injure yourself.

There should be a clear and unobstructed path along the walking paths. Make sure that the blower motor does not interfere with the walking paths.

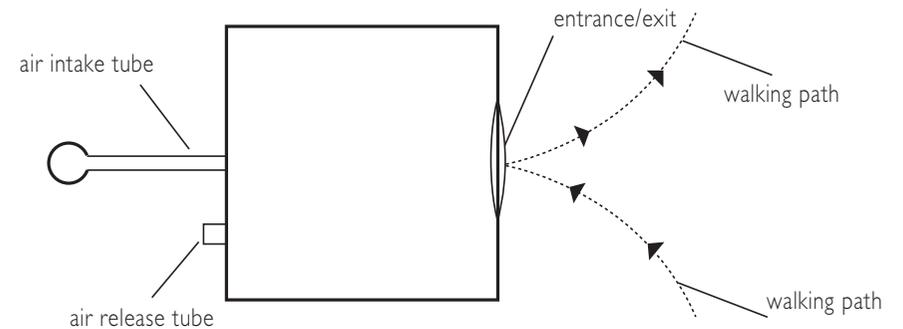

# Emergency Evacuation

For emergency evacuation, users should evacuate through the exit and walk to a safe location as shown with the dotted lines in the diagram below. To avoid danger of tripping over the air intake tube and causing potential injury, do not walk on the side of the product that has blower motor attached.

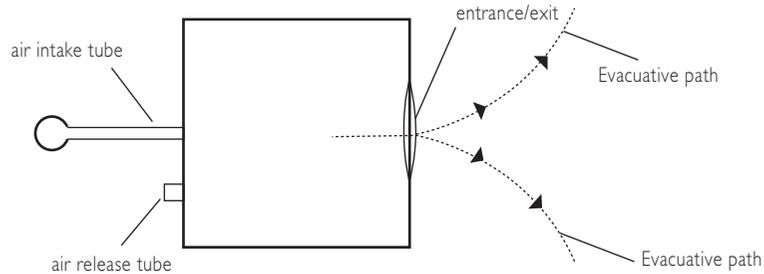

## SAFETY CHECKLIST: READ BEFORE USING

### SETUP:


1. Before setup: Check under and around the bouncer for sharp objects, rocks, sticks, lawn sprinklers or any other object that can cause injury or damage the bouncer. Setup on a flat lawn surface, free of depressions or high spots.
2. Use with manufacturer-supplied stakes ONLY.
3. Mega Bouncer™ should be placed in a flat, clear area that is at least 10 ft (305cm) long and 10 ft (305cm) wide. There should be a safety area of at least 10 ft (305cm) on all sides that is clear of trees, walls, holes, garden equipment, pools and other objects that may pose a safety risk.
4. Do not use a damaged bouncer.
5. Blower and electrical cords should not pass under the inflatable bouncer and interfere with its operations.

### USE :

1. Adult setup and supervision is required at all times. Adults should read instruction manual entirely and instruct children on proper use of this bouncer.
2. Remove all hard or sharp objects from person and pockets, such as toys, buckles, keys, jewelry, watches, etc.
3. For long periods of play, move bouncer occasionally to prevent depressions in ground underneath.
4. Check all ground stakes occasionally to make sure they stay secure and flat in the ground.

### To Deflate:

1. Remove all users from the Mega Bouncer™.
2. Unplug the blower.
3. Disconnect the intake tube from the blower and place the blower in a safe place.
4. Open the air release tube and allow the inflatable bouncer to deflate completely. It should deflate on its own within 5 minutes.(Fig B1)
5. Remove the anchor stakes of the inflatable bouncer by pulling on the head of the stake. DO NOT pull on the bouncer corners!
6. Be sure the bouncer is free of dirt, leaves, sand, etc. This will lengthen the life of your bouncer.
7. Fold the inflatable bouncer in half, making sure that the release tube is parallel to the fold. Fold it in half 2 more times, parallel to the first fold.(Fig B2-B3)
8. Roll the inflatable bouncer tightly starting from the end opposite the intake and release tubes.(Fig B4-B5)
9. Roll the bouncer tightly from one end to the other and avoid any creasing.

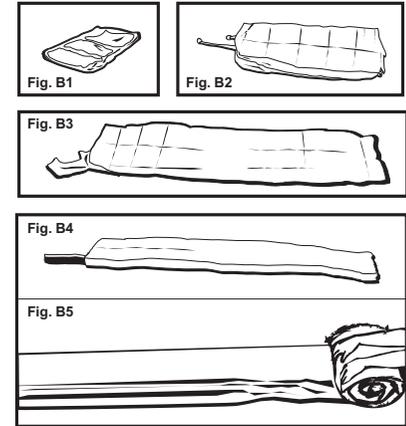


### IMPORTANT:

Never store the Mega Bouncer™ when wet. Allow drying before rolling up. Move the bouncer everyday to prevent browning or damage to the lawn. Follow all previous instructions each time you set up the bouncer. Store bouncer in a secure place, away from children, to prevent suffocation.

### Storage:

Slip the carrying bag over the rolled-up inflatable bouncer. Flip the bag and the bouncer over, close the bag, and store the bouncer and the blower in a dry place. Store the bouncer in a secure place away from children to prevent suffocation. Never leave either the Mega Bouncer™ or the blower outside when not in use.(Fig B6-B8)

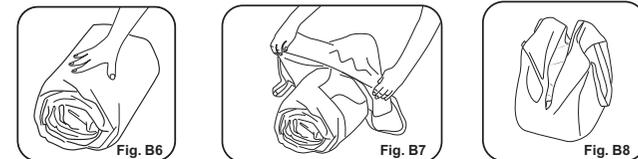

To prevent mold and other damage to the bouncer, it is strongly advised to air out the product with the blower motor to ensure it is completely dry before folding up for storage.

## Grounding Instructions


This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord containing a grounding wire with an appropriate grounding plug. The plug must be plugged into an outlet that is properly installed and grounded in accordance with all local codes and ordinances.

**DANGER** – Improper installation of the grounding plug can result in a risk of electric shock. If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulation having a green outer surface with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood or if in doubt as to whether the product is properly grounded. Do not modify the plug provided; if it will not fit the outlet, have the proper outlet installed by a qualified electrician.

This product is for use on a nominal 120-V circuit, and has a grounding plug similar to the plug illustrated in sketch below. A temporary adapter similar to the adapter illustrated in sketches B and C may be used to connect this plug to a 2-pole receptacle as shown in sketch B when a properly grounded outlet is not available.

The temporary adapter shall be used only until a properly grounded outlet is installed by a qualified electrician. The green colored rigid ear, lug, or similar part extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by a metal screw.

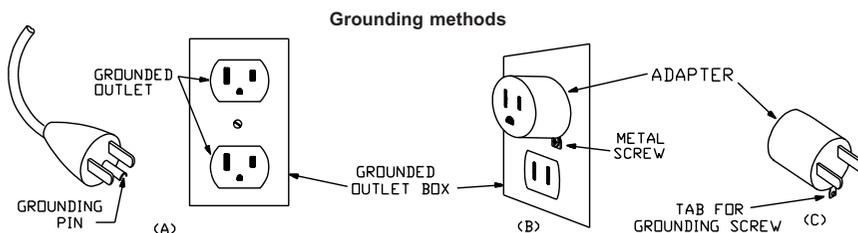

## Maintenance of Bouncer

- 1 Check the bouncer at regular intervals for holes, tears or other damage. **DO NOT** use a damaged bouncer. Use of a damaged bouncer could result in serious injury or death.
- 2 Check the bouncer at regular intervals for any signs of damage or deterioration. A damaged or deteriorated bouncer could cause the bouncer to become unstable which would be a significant safety hazard.
- 3 In addition to checking the product at a regular interval, be sure to complete a thorough check of the entire product at the beginning of each season or series of use.
- 4 If any component of the product is damaged or deteriorated, discontinue use and contact the manufacturer.
- 5 Regularly check the condition of the ground stakes that hold the bouncer in place. Damage to or deterioration of the stakes could result in the bouncer becoming unstable which could result in serious injury.
- 6 To keep the product clean, you can use a dry cloth or a cloth dampened with a neutral, non-inflammable, nontoxic cleaning and sanitizing solution or pure water to wipe the surface of the bouncer or blower.

## Blower Operating Instructions

### Intended use:

This product is only to be used for inflating the Mega BOUNCER™. Household Use only.

### Warning:


1. Electrical current requirements: 110-120VAC/60Hz.
2. The power supply to the blower should include a reliable earth terminal and current leakage protection device.
3. The power cord to the appliance should be clearly marked, so that persons using lawn mowers or other types of equipment are aware that there is a cord on the ground.
4. The blower should never be left unattended when in use. The appliance is not to be used by children.
5. No objects should cover the air intake when the blower is in use. Sand, small stones or other objects should not be allowed to be sucked into the blower.
6. Under no circumstances should a finger or any sharp object be inserted into the air intake.
7. The power supply to the blower should not be exchanged for any other type of supply. If the power supply is damaged, it should be repaired by a technician.
8. To avoid the danger of electrical shock, do not use the blower in the rain.
9. Do not use extension cords as this would present an electrocution hazard.
10. Do not leave the blower exposed to strong sunlight.
11. Children should not touch the blower. Children must not play on the product until the blower is properly installed.
12. Children should not attach foreign objects to the blower that are not specifically designed for use with the blower, such as, but not limited to jump ropes, clothesline, pet leashes, cables and chains they may cause a strangulation hazard.
13. Sudden gusts of wind may lift the Mega Bouncer™ off of the ground.
14. Blowers and electrical cords shall be kept out of reach.

### Installation:

1. Place the blower on the ground and then secure it by inserting the ground stakes into the holes in the base.
2. The blower should be installed in a well-ventilated location and on a level surface.
3. The air input of the Mega Bouncer™ (the long yellow intake tube) is to be attached to the air output of the blower and secured in place with cord.

### Using the blower:

1. Plug the blower into a power supply.
2. To avoid electrical shock, never plug in or unplug the appliance with wet hands.
3. The power supply should be disconnected if the blower or the Mega Bouncer™ needs to be transported or moved.
4. There is an ON/OFF switch on the blower body. Press "I" to switch on the blower, and press "O" to switch off the blower.

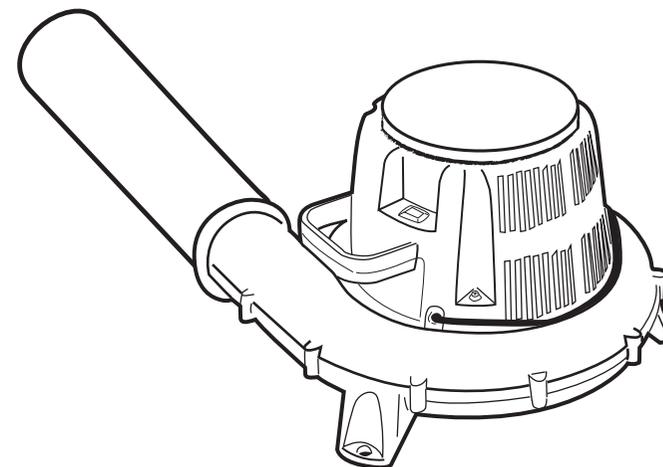


# Attn: Each time the blower is used, a simple test with the Ground Fault Circuit Interrupter (GFCI) must be conducted.

1. Push the "Reset" button located on the GFCI receptacle, first to assure normal blower and GFCI operation.
2. Press "I" to switch on the blower.
3. Push the "Test" button located on the GFCI receptacle. The blower should go "OFF".
4. Push the "Reset" button again. The blower should go "ON" again.

The indicator on the GFCI receptacle will be red whenever the "Reset" button is pressed.

If the blower remains "ON" when the "Test" button is pushed, the blower or GFCI is not working properly. If blower or GFCI is not working properly, please call a qualified, certified electrician who can assess the situation.

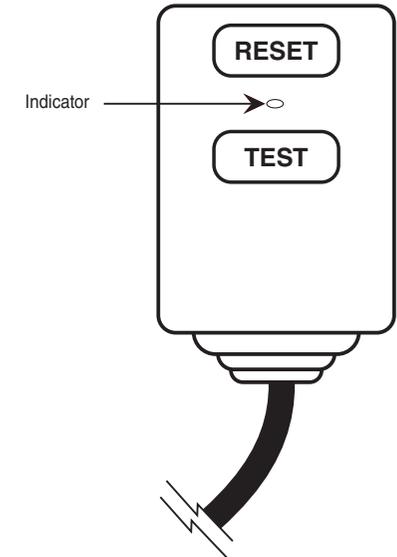

## Maintenance and Storage:

1. To keep the blower clean you can use a dry cloth or a cloth dampened with a neutral, non-inflammable, nontoxic cleaning and sanitizing solution or pure water to wipe the surface of the blower.
2. You should not clean the blower with a chemical solution as this may damage the coating and plastic parts.
3. Never clean the blower in water.
4. Never store the blower outside. Keep it in a dry indoor place unreachable by children.
5. Regularly check the condition of the blower stakes. Damage to or deterioration of the stakes could result in the blower becoming unstable which could result in serious injury.
6. Regularly check the condition of the power cord and GFCI. Damage to or deterioration of the cord or GFCI could cause a serious electrocution hazard. If the cord or GFCI is damaged or deteriorated, immediately discontinue use of the blower and contact the manufacturer.
7. This blower with Auto-Reset Protector, if the motor over heated, the protector will trip to protect your safety. Turn off the blower and let it cool down. Then, you can use it again. Please follow the instruction carefully to avoid any wrong operation that will cause overheating.
8. To keep the power cord in good condition, hand-supported product when carry the power cord, and do not twisting the cord, keep it dry and store it dry.





**ALL NEW MATERIAL. Surface Clean Only. Electrical ratings: 110-120VAC, 60Hz, 3.3A**





**WARNING - Electrocution Hazard**  
**DO NOT USE EXTENSION CORDS**  
**WITH THIS PRODUCT.**

**NOTE:**  
The maximum wind speed for operations of the inflatable shall be 20 mph.

## Part List

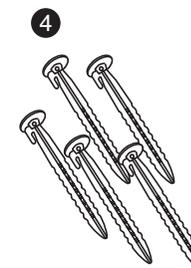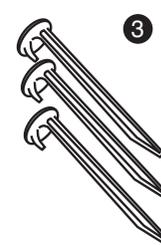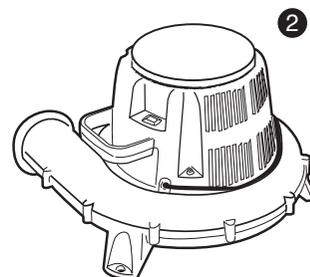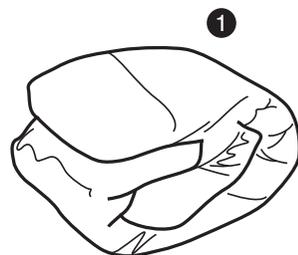

1. 1 x Inflatable Bouncer.
2. 1 x Blower Motor.
3. 3 x Blower Ground Stakes (Orange).
4. 4 x Bouncer Ground Stakes + 1 extra (Yellow).
5. 1 x Carrying Bag.
6. 4 x Repair Patch.

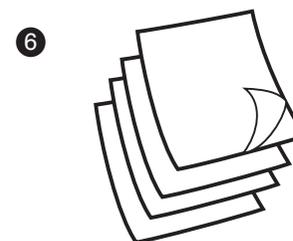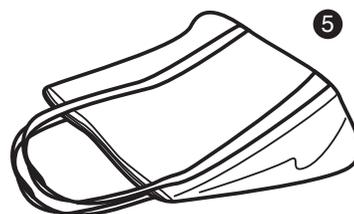

### DO NOT RETURN TO STORE

THIS PRODUCT CANNOT BE RETURNED  
FOR A REFUND AFTER  
IT HAS BEEN UNPACKED AND USED.

FOR QUESTIONS OR PROBLEMS WITH THIS PRODUCT  
PLEASE EMAIL BELOW ADDRESS  
FOR EXPEDITED ASSISTANCE

**CUSTOMERSERVICE@TOYSINQUIRY.COM**

OR

1-800-434-6178

**TOYQUEST**  
18007

PLEASE RETAIN THIS INFORMATION FOR FUTURE REFERENCE.  
COLORS AND CONTENTS MAY VARY.  
PUTOU INDUSTRIAL AREA,  
HUZHEN TOWN, BOLUO,  
HUIZHOU, CHINA  
ALL RIGHTS RESERVED  
**MADE IN CHINA**  
www.toysinquiry.com